

IMPORTANT—INSTALL SOFTWARE BEFORE CONNECTING CLA-101

1. Insert Home Test Lab Suite disk (If autoplay doesn't start: navigate to your CD-Rom drive and double-click setup.exe)
2. Follow on-screen instructions
3. When the instillation is complete plug the CLA-101 into a USB port
4. The drivers to communicate with the CLA-101 will automatically install
5. Double Click the Home Test Lab Icon on your desktop or select the program from your start menu
6. The first time you use the software you will be asked to create a user. Enter your name or a description of your application (for example: If you are using the Home Test Lab suite to monitor your pool parameters then you can create a user named "My Pool") Additional users can be added later on.
7. Every time you start the Home Test Lab Suite the CLA-101 will be automatically calibrated. This two step process only takes a minute and ensures the most accurate results.
8. Remove the Home Test Lab Suite install disk, and insert the Add-In disk included with your purchase.
9. From the Home Test Lab Suite main screen click on 'Configuration', and then click on 'Install Add-in'
10. Navigate to your CD-Rom drive, select the Add-in file, and click Open.
11. Restart the Home Test Lab Suite and enjoy.

**Home Test Lab Suite
Product Registration Card**

Model Number: _____

Serial Number: _____

Purchase Date: _____

Name & Address: _____

Email Address: _____


Add-In: Pool & Spa Aquarium Environmental Water Health



PLEASE
PLACE
STAMP
HERE

LULLHAVEN RESEARCH LLC

456 Roosevelt Trail
Box 7
Windham, ME 04062

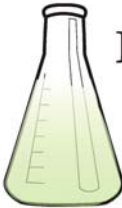

**Home
Test Lab
Suite**

Quick Start Guide

